

User Guide Set Top Box (Factory Reset, PVR & Parental Lock)

Fitur Parental Lock


Parental Lock is one of the features contained in Biznet Home cabletv services, which can be used to lock certain channels which only can be accessed by using a 4 (four) digit password.

Here's how to activate parental lock feature in the Kaon decoder:

1. Turn on the kaon decoder, go to the main menu and select system settings to the last press enter :
1. Nyalakan dekoder Kaon, masuk ke menu utama dan pilih ke system setting lalu tekan enter.



2. Enter the 4 (four) digit password (standard password : 0000).
2. Masukkan 4 digit password (untuk password standart 0000).

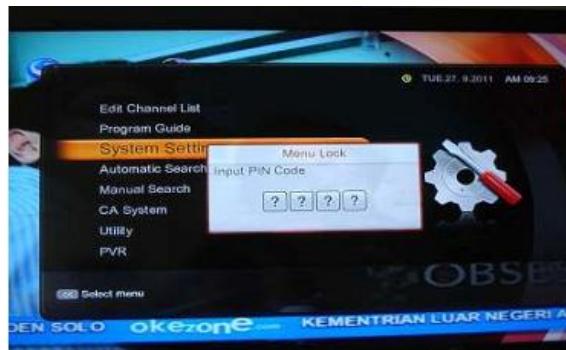

Select Parental Control Settings in the menu system press enter.

Pilih Parental Control pada menu system Setting tekan enter.




You are prompted to enter the 4 (four) digit password (standard password 0000), password only can be changed from wishes of the customer.

Anda diminta untuk memasukan 4 digit password (password standart 0000), password bisa diganti atau dirubah sesuai dengan keinginan pelanggan.



Choose the channel that will be locked based on age of audience, select the channel with adult material for locked. Then exit the menu.

Pilih siaran yang akan di kunci berdasarkan dengan usia penonton, pilih siaran yang bermateri orang dewasa (adult) untuk di kunci. Kemudian exit menu.

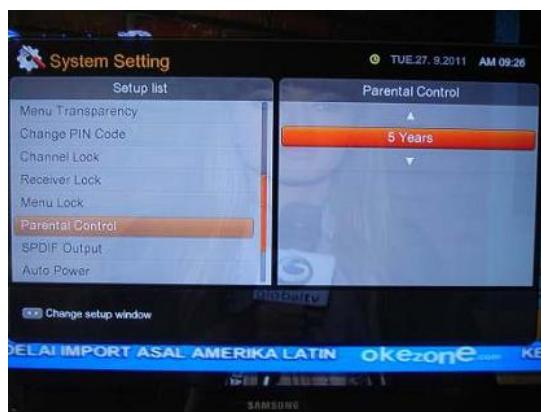

Parental lock is already running process and automatically to broadcast containing adult material requires a password to be able to enjoy it.

Proses Parental lock sudah berjalan dan otomatis untuk siaran yang berisikan materi orang dewasa membutuhkan password untuk dapat menikmatinya.

Fitur Personal Video Recording (PVR)

Features contained in the Biznet Home cabletv service, is used to record the impressions in the TV into a customer's USB or external HDD.

The first step to enjoying these features are :

1. Enter the port of storage media into the USB port decoder, after enter the port, television screen will indicate that the port is connected so that it can directly use to store files. If not connected then try to unplug & plug back until the port connect
2. To start recording the shows that you want to record, press the Record button (Button Color Red) in the Remote Decoder.



3. Once the Record button (Red Buton) on tap it on the television screen will show signs  it means that the material is on record.
4. Setelah Tombol Record (Tombol Warna Merah) di tekan maka di layar televisi akan muncul tanda  bahwa materi tersebut sedang di record.



4. Press OK button for save the materials.
4. Untuk menyimpan materi maka tekan tombol OK.



5. If you want to stop recording please press the Stop button on the remote decoder (Green Button) and
5. Bila ingin menghentikan record maka tekan Tombol Stop di remote decoder (Tombol Warna Hijau) lalu

then press the OK button.

tekan tombol OK.



6. To view the recorded materials, select the MENU button and select PVR.



7. Select the File List and press OK.


6. Untuk melihat hasil record maka pilih tombol MENU lalu pilih PVR.

7. Pilih File List lalu tekan OK.



8. After the list has been selected, file will be display the files that have been recorded.

8. Setelah File List telah di pilih maka akan muncul file-file yang sudah direcord.

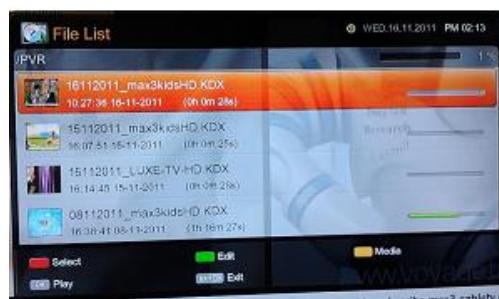

9. To select and watch the recorded material file, press the up and down arrows ▲ / ▼ and press OK.

9. Untuk memilih dan menayangkan file materi yang sudah di record maka tekan tombol panah keatas dan panah kebawah ▲ / ▼ lalu tekan OK di file materi

yang sudah di pilih



Factory Reset

1. Press 'MENU' button on your remote
2. Choose 'SYSTEM SETTING' menu using ▲ / ▼ buttons then press 'OK'.
3. You will be asked to enter your PIN code before you can enter this menu. The standart PIN code is '0000'.
4. Choose 'FACTORY RESET' menu using ▲ / ▼ buttons then press 'OK'
5. Automatically, your screen will be blank for a while. The device will take a moment to reconfigure.
6. You will see Easy Installation menu after device' reconfiguration is done. This give you the convenience of selecting language, adjusting the time and searching TV channels.
1. Tekan tombol 'MENU' pada remote.
2. Pilih menu 'SYSTEM SETTING' menggunakan tombol ▲ / ▼ kemudian tekan tombol 'OK'.
3. Anda akan diminta untuk memasukan kode PIN sebelum masuk pada menu ini. Kode PIN standar adalah '0000'.
4. Pilih menu 'FACTORY RESET' menggunakan tombol ▲ / ▼ kemudian tekan tombol 'OK'.
5. Secara otomatis tampilan di layar akan hilang. Perangkat akan memerlukan waktu beberapa saat untuk melakukan konfigurasi ulang.
6. Anda akan melihat menu Instalasi Cepat setelah perangkat selesai melakukan konfigurasi ulang sehingga dapat dilakukan pemilihan bahasa, penyesuaian waktu dan pencarian saluran TV.